

Set Up

1



Holding the aluminium pole, wind the handle in a clock-wise direction.



2



As the legs extend, ensure that the banner is adequately lifted to allow the legs to open out.

3



Continue to wind only until the fabric becomes taut and firm.

Take Down

1



To retract the banner, turn the handle in an anti-clockwise direction and allow the bottom to fully retract.



2



PLEASE NOTE:

Do not continue to crank if the handle becomes stiff. As the legs retract, make sure the fabric doesn't get pinched in the mechanism.

Store in compact carry bag for easy portability.

wind-up **NEW** BANNERS



↑ 0.9m

➔ 1.7m

📦 2.6 kg



www.doubleimpact.com.au

P. (02) 9999 1322 F. (02) 9999 1955